

## Instructions for Use

# Thermal shut-off system (TSS)



for the protection of non-higher thermal resistant components,  
safe shut-off of the gas supply in pipe when the pre-determined  
temperature is exceeded due to a fire

**Model**  
G2206T

**Year built (from)**  
01/1990

**viega**

# Table of contents

<b>1</b>	<b>About these instructions for use</b>	<b>3</b>
	1.1 Target groups	3
	1.2 Labelling of notes	3
	1.3 About this translated version	4
<b>2</b>	<b>Product information</b>	<b>5</b>
	2.1 Standards and regulations	5
	2.2 Intended use	7
	2.2.1 Areas of application	7
	2.2.2 Media	7
	2.3 Product description	8
	2.3.1 Overview	8
	2.3.2 Threaded connection	8
	2.3.3 Markings on components	8
	2.3.4 Compatible components	8
	2.3.5 Operating mode	9
	2.3.6 Technical data	9
	2.4 Information for use	10
	2.4.1 Corrosion	10
<b>3</b>	<b>Handling</b>	<b>11</b>
	3.1 Assembly information	11
	3.1.1 Mounting instructions	11
	3.2 Assembly	11
	3.2.1 Leakage test	11
	3.3 Maintenance	11
	3.4 Disposal	12

# 1 About these instructions for use

Trade mark rights exist for this document; for further information, go to [viega.com/legal](http://viega.com/legal).

## 1.1 Target groups

The information in this instruction manual is directed at the following groups of people:

- Contract installers
- Professional companies specialising in the construction, maintenance and alteration of a natural or liquid gas system

Liquid gas systems may only be constructed, maintained or altered by companies that have the necessary qualification and experience.

Individuals without the abovementioned training or qualification are not permitted to mount, install and, if required, maintain this product. This restriction does not extend to possible operating instructions.

The installation of Viega products must take place in accordance with the general rules of engineering and the Viega instructions for use.

## 1.2 Labelling of notes

Warning and advisory texts are set aside from the remainder of the text and are labelled with the relevant pictographs.



### **DANGER!**

This symbol warns of possible life-threatening injury.



### **WARNING!**

This symbol warns of possible serious injury.



### **CAUTION!**

This symbol warns of possible injury.



### **NOTICE!**

This symbol warns of possible damage to property.



This symbol gives additional information and hints.

## 1.3 About this translated version

This instruction for use contains important information about the choice of product or system, assembly and commissioning as well as intended use and, if required, maintenance measures. The information about the products, their properties and application technology are based on the current standards in Europe (e.g. EN) and/or in Germany (e.g. DIN/DVGW).

Some passages in the text may refer to technical codes in Europe/Germany. These should serve as recommendations in the absence of corresponding national regulations. The relevant national laws, standards, regulations, directives and other technical provisions take priority over the German/European directives specified in this manual: The information herein is not binding for other countries and regions; as said above, they should be understood as a recommendation.

## 2 Product information

### 2.1 Standards and regulations

The following standards and regulations apply to Germany / Europe and are provided as a support feature.

#### Regulations from section: Application areas

Scope / Notice	Regulations applicable in Germany
Planning, execution, modification and operation of gas installations	DVGW-TRGI 2018
Planning, execution, modification and operation of liquid gas installations	DVFG-TRF 2021
Gas installations in industrial, commercial, and process engineering systems	DVGW-Arbeitsblatt G 5614
Gas installations in industrial, commercial, and process engineering systems	DVGW-Arbeitsblatt G 462
Gas installations in industrial, commercial, and process engineering systems	DVGW-Arbeitsblatt G 459-1
Gas installations in industrial, commercial, and process engineering systems	DVGW Fachinformation Nr. 10

#### Regulations from section: Media

Scope / Notice	Regulations applicable in Germany
Gas characteristics	DVGW-Arbeitsblatt G 260

#### Regulations from section: Overview

Scope / Notice	Regulations applicable in Germany
Requirements in gas fittings	DIN 3586

**Regulations from section: Threaded connection**

Scope / Notice	Regulations applicable in Germany
Threaded pair	DIN EN 10226-1
Permitted sealants	DIN 30660
Permitted sealants	DIN EN 751-2

**Regulations from section: Corrosion**

Scope / Notice	Regulations applicable in Germany
Corrosion protection	DIN 30672
Corrosion protection for external pipes	DVGW-TRGI 2018, Point 5.2.7.1
Corrosion protection for external pipes	DVFG-TRF 2021,, Point 7.2.7.2

**Regulations from section: Notes on mounting**

Scope / Notice	Regulations applicable in Germany
Gas installations	DVGW-TRGI 2018
Liquid gas installations	DVFG-TRF 2021

**Regulations from section: Leakage test**

Scope / Notice	Regulations applicable in Germany
Leakage test for gas installations	DVGW-TRGI 2018, Point 5.6
Leakage test for liquid gas installations	DVFG-TRF 2021, Point 8.2

**Regulations from section: Maintenance**

Scope / Notice	Regulations applicable in Germany
Ensuring and maintaining a safe operating condition	DVGW-TRGI 2018, Point 13

## 2.2 Intended use

For fire safety reasons, a TSS is required for gas devices and other components that do not fulfil the HTR requirements.



Agree the use of the model for areas of application and media other than those described with Viega.

### 2.2.1 Areas of application

Use is possible in the following areas among others:

- Gas installations
- Liquid gas installations

For planning, execution, modification and operation of gas installations, observe the applicable regulations, see ↗ *'Regulations from section: Application areas'* on page 5.

Use is possible in the gas installations described below:

- Gas installations
  - Low pressure range  $\leq 100$  hPa (100 mbar)
  - Medium pressure range from 100 hPa (100 mbar) up to 0.1 MPa (1 bar)
- Liquid gas installations
  - With liquid gas tank in medium pressure range downstream of the pressure regulating valve, 1st level on the liquid gas tank  $> 100$  hPa (100 mbar) up to a permitted operating pressure of 0.5 MPa (5 bar)
  - With liquid gas tank in the low pressure range  $\leq 100$  hPa (100 mbar) behind the pressure regulating valve, 2nd level
  - With liquid gas pressurised container (liquid gas bottles)  $< 16$  kg Behind the small bottle pressure regulating valve
  - With liquid gas tank (liquid gas bottle)  $\geq 16$  kg Behind the large bottle pressure regulating device

Observe the applicable regulations, see ↗ *'Regulations from section: Application areas'* on page 5.

### 2.2.2 Media

The model is also suitable for the following media, amongst others:

- Gases, see ↗ *'Regulations from section: Media'* on page 5
- Liquid gases, only in the gaseous state for domestic and commercial applications, see ↗ *'Regulations from section: Media'* on page 5.

## 2.3 Product description

### 2.3.1 Overview



The model complies with the requirement of the applicable regulations, see [Chapter 2.1 'Standards and regulations'](#) on page 5.

The model is equipped as follows:

- inlet side with Rp internal thread
- outlet side with R external thread
- galvanised steel

The model is available in the following dimensions: Rp / R ½ / ¾ / 1 / 1¼ / 1½ / 2.

### 2.3.2 Threaded connection

Prerequisite for a threaded connection, which seals via a thread, is a threaded pair in accordance with applicable regulations, see ['Regulations from section: Threaded connection'](#) on page 6. Pursuant to these regulations, a permitted threaded pair comprises a conical external thread and a cylindrical internal thread, e.g. R ¾ and Rp ¾.

Only use commercially available and chloride-free, DVGW approved sealant in accordance with the applicable regulations to seal threads, see ['Regulations from section: Threaded connection'](#) on page 6.

### 2.3.3 Markings on components

The model is marked as follows:

- MOP5 for maximum operating pressure 0.5 MPa (5 bar)
- Flow direction indicator
- DVGW writing
- TSS marking for thermal shut-off system

### 2.3.4 Compatible components

Please contact the Viega Service Center for questions on this subject.



### 2.3.5 Operating mode

#### Thermal shut-off system (TSS)

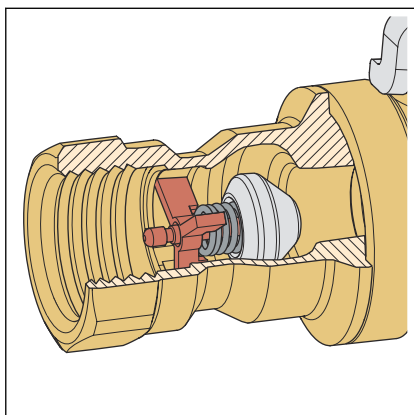


Fig. 1: Example of a TSS in operating position

The cone seal is pre-stressed with a spring and is held in position by a soldered strut. The solder melts at a temperature of > 96° C. The spring slackens and pushes the valve cone into the outlet. The gas flow is then blocked and the valve is now permanently closed gas-tight.

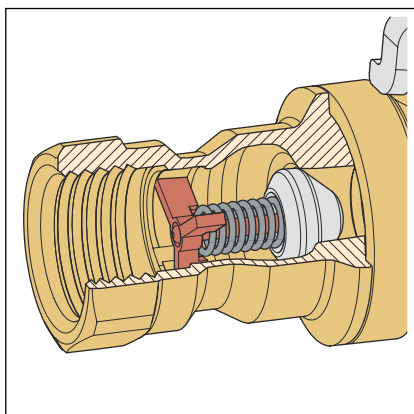


Fig. 2: Example of a TSS that is triggered



Triggered TSS can no longer be opened and are no longer fit for use.

The complete fitting must be replaced after actuation.

### 2.3.6 Technical data

Observe the following operating conditions for the installation of the model:

Use	Gas installation	Liquid gas installation
Operating temperature	-20–80 °C	20 °C and 70 °C
Operating pressure	≤ 0.5 MPa (5 bar) (MOP 5)	≤ 0.5 MPa (5 bar) (MOP5) <sup>1)</sup>
	≤ 0.1 MPa (1 bar) (HTR/C1) <sup>2)</sup>	≤ 0.1 MPa (1 bar) (HTR/C1) <sup>2)</sup>

<sup>1)</sup> Maximum pressure – equates to the response pressure of the safety shut-off valve in the pressure regulating valve

<sup>2)</sup> Operating pressure with HTR requirement max. 0.1 MPa (1 bar) (C1)

## 2.4 Information for use

### 2.4.1 Corrosion

Depending on the area of use, corrosion protection measures may have to be taken into account.

Observe the pertinent guidelines for corrosion protection, see ↗ *'Regulations from section: Corrosion'* on page 6.



- Do not use the model in aggressive surroundings.
- Avoid contact with aggressive building materials such as materials containing nitrite or ammonium.

## 3 Handling

### 3.1 Assembly information

#### 3.1.1 Mounting instructions

##### Checking system components

System components may, in some cases, become damaged through transportation and storage.

- Check all parts.
- Replace damaged components.
- Do not repair damaged components.
- Contaminated components may not be installed.

##### Mounting conditions

Observe the following when mounting:

- Observe flow direction indicator.
- Do not cover or paint the model.
- Do not install the model in heat zones (e.g. with hot emissions or strong heat radiation).
- Install directly in front of gas appliances or components, which are not higher thermal resistant.

Exceptions, selection criteria and the arrangement of the components are described in the applicable regulations, see ↪ *Chapter 2.1 'Standards and regulations' on page 5.*

### 3.2 Assembly

#### 3.2.1 Leakage test

The installer must perform a leakage test before commissioning.

Carry out this test on a system that is finished but not covered.

Comply with the general rules of engineering and the applicable directives, see ↪ *'Regulations from section: Leakage test' on page 6.*

Document the result.

### 3.3 Maintenance

The gas installation must be given a visual inspection, e. g. by the owner, once a year.

Serviceability and leak tightness must be checked every twelve years by an installation contractor.

To be covered by the warranty and to ensure the safe operation of the gas installations, operate and maintain them as intended. For more detailed information, refer to the applicable regulations, see ↪ *'Regulations from section: Maintenance' on page 6.*

## 3.4 Disposal

Separate the product and packaging materials (e. g. paper, metal, plastic or non-ferrous metals) and dispose of in accordance with valid national legal requirements.



**Viega GmbH & Co. KG**  
service-technik@viega.de  
viega.com

INT • 2022-09 • VPN220115

