


**viega**



4 015211 651404

**Prestabo-přechodové koleno 90°,  
s SC-Contur, model 1114.2**

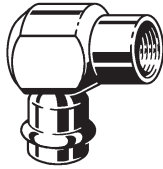

d	Rp
12	1/2


**651 404**

**viega**



4 015211 656478

**Prestabo-přechodové koleno 90°,  
s SC-Contur, model 1114.2**

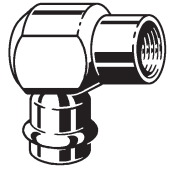

d	Rp
15	1/2


**656 478**

**viega**



4 015211 601263

**Prestabo-přechodové koleno 90°,  
s SC-Contur, model 1114.2**

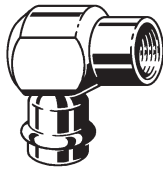

VdS	d	Rp
✓	22	1/2


**601 263**

**viega**



4 015211 601270

**Prestabo-přechodové koleno 90°,  
s SC-Contur, model 1114.2**

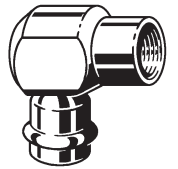

VdS	d	Rp
✓	22	3/4


**601 270**

**viega**



4 015211 601287

**Prestabo-přechodové koleno 90°,  
s SC-Contur, model 1114.2**

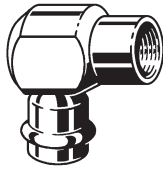

VdS	d	Rp
✓	28	1/2


**601 287**

**viega**



4 015211 601294

**Prestabo-přechodové koleno 90°,  
s SC-Contur, model 1114.2**

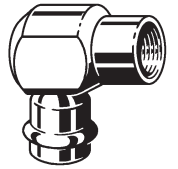

VdS	d	Rp
✓	28	3/4


**601 294**

**viega**



4 015211 642310

**Prestabo-přechodové koleno 90°,  
s SC-Contur, model 1114.2**

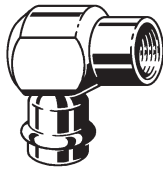

VdS	d	Rp
✓	28	1

**642 310**