Instructions for Use

Advantix odour trap



for Advantix shower channel, for installation height 40 mm and up, vertical drain



Year built (from) 04/2016





Table of contents

1	About the	se instructions for use	;
	1.1 Target groups 1.2 Labelling of notes 1.3 About this translated version		
2	Product information		
	2.1 Standards and regulations		!
	2.2 Certification		
	2.3.1		
	2.3.2		·
	2.3.3	Drainage capacity	
	2.4 Product description		8
	2.4.1	Overview	
	2.4.2	Technical data	
3	Handling		
	3.1 Assembly information		
	3.1.1		
	3.1.2	Installation dimensions	
	3.2 Assembly		10
	3.2.1	Mounting the odour trap	10
	3 3 Dispos	1.	



1 About these instructions for use

Trade mark rights exist for this document; for further information, go to *viega.com/legal*.

1.1 Target groups

The information in this instruction manual is directed at the following groups of people:

Heating and plumbing experts and trained personnel

Individuals without the abovementioned training or qualification are not permitted to mount, install and, if required, maintain this product. This restriction does not extend to possible operating instructions.

The installation of Viega products must take place in accordance with the general rules of engineering and the Viega instructions for use.

1.2 Labelling of notes

Warning and advisory texts are set aside from the remainder of the text and are labelled with the relevant pictographs.



DANGER!

This symbol warns of possible life-threatening injury.



WARNING!

This symbol warns of possible serious injury.



CAUTION!

This symbol warns of possible injury.



NOTICE!

This symbol warns of possible damage to property.



This symbol gives additional information and hints.



1.3 About this translated version

This instruction for use contains important information about the choice of product or system, assembly and commissioning as well as intended use and, if required, maintenance measures. The information about the products, their properties and application technology are based on the current standards in Europe (e.g. EN) and/or in Germany (e.g. DIN/DVGW).

Some passages in the text may refer to technical codes in Europe/Germany. These should serve as recommendations in the absence of corresponding national regulations. The relevant national laws, standards, regulations, directives and other technical provisions take priority over the German/European directives specified in this manual: The information herein is not binding for other countries and regions; as said above, they should be understood as a recommendation.



2 Product information

2.1 Standards and regulations

The following standards and regulations apply to Germany / Europe and are provided as a support feature.

Regulations from section: Media

Scope / Notice	Regulations applicable in Germany
Typical domestic wastewater	DIN 1986-3



2.2 Certification

Data acc. to DIN EN 1253, Table 7

Manufacturer	Viega GmbH & Co.KG
Manufacturer identification mark	viega
Certificate of conformity	Viega DIN EN 1253
Address	Viega GmbH & Co.KG Viega Platz 1 57439 Attendorn Germany
Relevant standard	DIN EN 1253-1
Load class	К3
DN	50
Product class with respect to temperature behaviour	A
Specific run-off behaviour	≥ 0.4 l/s

2.3 Intended use

2.3.1 Areas of use

The Advantix odour trap is suitable for use in ViegaAdvantix shower channels base unit model 4982.10 and model 4982.20.

The drain is designed for small to medium volumes of water, which occur in e. g. residential building.

Technical information, see ♥ Chapter 2.4.2 'Technical data' on page 8.

The drain is suitable for vertical connection to the drainpipe.




2.3.2 Media

The drain is intended for draining wastewater commonly encountered in households in constant operation, see % 'Regulations from section: Media' on page 5.

- The short-term temperature of the wastewater may reach up to 95° C. The temperature must be considerably lower in constant operation.
- The pH value must be higher than four but lower than ten.

It is not permitted to introduce wastewater, which could damage the product material.

2.3.3 Drainage capacity

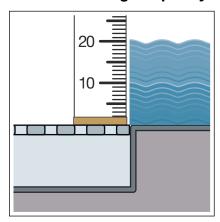


The drainage capacity at an accumulation height of 10 mm above the grate is 0.9 l/s

The drainage capacity at an accumulation height of 20 mm above the grate is 1.1 l/s



2.4 **Product description**

2.4.1 **Overview**

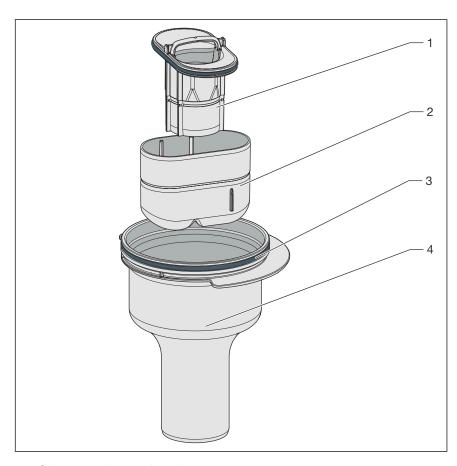

- Odour trap immersion pipe
- 2 Odour trap insert
- Sealing element
- Casing

Technical data 2.4.2

Nominal width [DN] (drain socket)	DN50
Drainage capacity	Shapter 2.3.3 'Drainage capacity' on page 7
Dimensions and installation height	Schapter 3.1.2 'Installation dimensions' on page 9
Water seal level	50 mm
Load class	K = 300 kg



3 Handling

3.1 Assembly information

3.1.1 Important note



Observe the instructions for use of the base unit when mounting.

Before assembly:

- Check if the drainage capacity of the drain is sufficient for the arising water volume *♦ Chapter 2.3.3 'Drainage capacity' on page 7*.
- Check if the installation height of the drain corresponds with the planned floor construction.
- Ensure that the required connection line is installed with the necessary incline to the planned installation location.

During assembly:

Observe installation dimensions.

3.1.2 Installation dimensions

Dimensional drawing

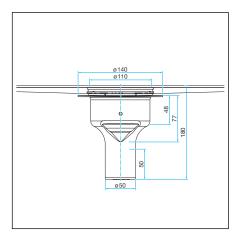


Fig. 1: Dimensional drawing for model 4982.94



Installation height


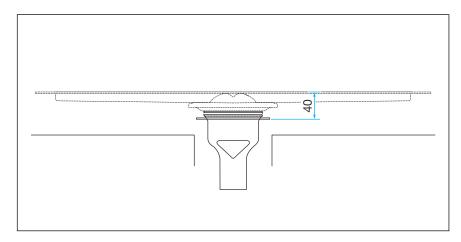



Fig. 2: Installation height for model 4982.94

3.2 Assembly

3.2.1 Mounting the odour trap

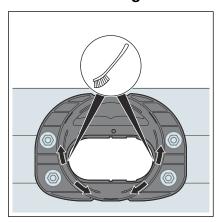


Check the connection element for soiling, clean if necessary.

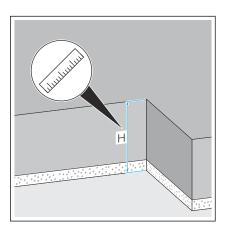


Determine the installation height.




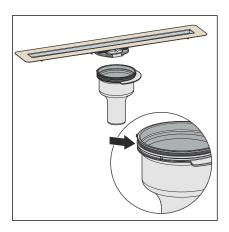


Mount the sealing element.
Check the sealing element for firm seat.

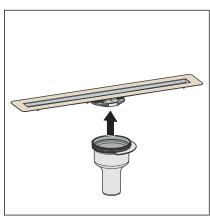

Press the drain into the connection element until it snaps home.

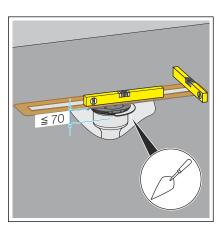


With mounting heights of max. 70 mm, align the base unit in the mortar bed.

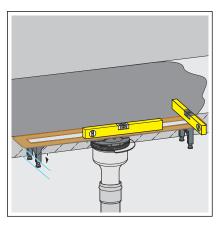


- Set the base unit to the upper edge of the screed.
- Align it horizontally in all directions.
- Connect the drain DN 50 to the drainage system.




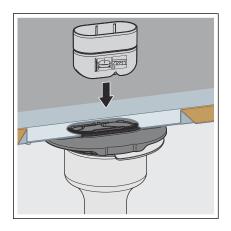


Put in the odour trap insert.

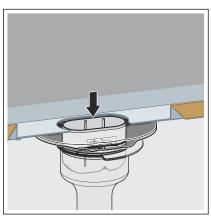

- The odour trap in installed condition.
- Turn the odour trap 90° to the right.

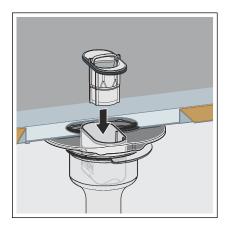


- Mount and grease the sealing element.
- Insert the odour trap immersion pipe.
 - $\hfill \Box$ The odour trap insert has been fastened.

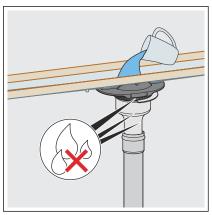


Check the base unit including the drain and the connection line for leak tightness.




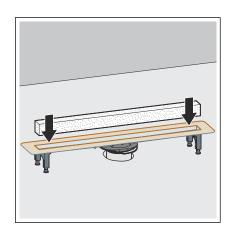


Insert the hard foam block.

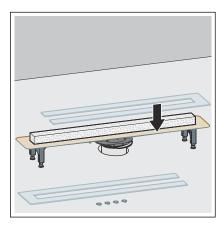

Mount the first part of the site protection.

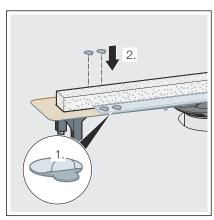


■ Remove the lower protective cover and stick the adhesive points on.

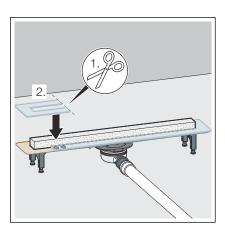

- Shorten the second part of the site protection if applicable, and mount it.
- Remove the top protective cover of the adhesive point.



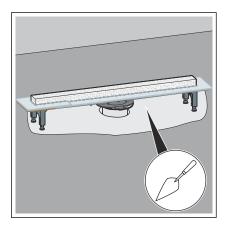

Line the shower channel incl. the drain up to the upper edge of the flange with screed.

3.3 Disposal

Separate the product and packaging materials (e. g. paper, metal, plastic or non-ferrous metals) and dispose of in accordance with valid national legal requirements.



