

Easytop concealed domestic water meter unit

Instructions for Use



for drinking water installation

Model
2231.13

Year built:
from 04/2017

en_INT

viega

Table of contents

1	About these instructions for use	4
1.1	Target groups	4
1.2	Labelling of notes	4
1.3	About this translated version	5
2	Product information	6
2.1	Standards and regulations	6
2.2	Intended use	8
2.2.1	Areas of use	8
2.2.2	Media	8
2.3	Product description	8
2.3.1	Overview	9
2.3.2	Threaded connection	9
2.3.3	Markings on components	9
2.3.4	Compatible components	9
2.3.5	Technical data	10
2.4	Information for use	10
2.4.1	Corrosion	10
2.5	Optional accessories	10
3	Handling	13
3.1	Assembly information	13
3.1.1	Installation dimensions	13
3.1.2	Mounting instructions	13
3.2	Assembly	14
3.2.1	Mounting the valve	14
3.2.2	Leakage test	14
3.3	Maintenance	15
3.4	Disposal	15

1 About these instructions for use

Trade mark rights exist for this document, further information can be found at viega.com/legal.

1.1 Target groups

The information in this manual is directed at heating and sanitary professionals and trained personnel.

It is not permitted for individuals without the abovementioned training or qualification to mount, install and, if required, maintain this product. This restriction does not extend to possible operating instructions.

The installation of Viega products must take place in accordance with the general rules of engineering and the Viega instructions for use.

1.2 Labelling of notes

Warning and advisory texts are set aside from the remainder of the text and are labelled with the relevant pictographs.



DANGER!

This symbol warns against possible life-threatening injury.



WARNING!

This symbol warns against possible serious injury.



CAUTION!

This symbol warns against possible injury.



NOTICE!

This symbol warns against possible damage to property.



Notes give you additional helpful tips.

1.3 About this translated version

This instruction for use contains important information about the choice of product or system, assembly and commissioning as well as intended use and, if required, maintenance measures. The information about the products, their properties and application technology are based on the current standards in Europe (e. g. EN) and/or in Germany (e. g. DIN/DVGW).

Some passages in the text may refer to technical codes in Europe/Germany. These should serve as recommendations in the absence of corresponding national regulations. The relevant national laws, standards, regulations, directives and other technical provisions take priority over the German/European directives specified in this manual: The information herein is not binding for other countries and regions; as said above, they should be understood as a recommendation.

2 Product information

2.1 Standards and regulations

The following standards and regulations apply to Germany / Europe. National regulations can be found on the relevant web site of your country at viega.com/standards.

Regulations from section: Fields of application

Scope / Notice	Regulations applicable in Germany
Planning, execution, operation and maintenance of drinking water installations	DIN EN 806, part 1
Planning, execution, operation and maintenance of drinking water installations	DIN EN 806, part 2
Planning, execution, operation and maintenance of drinking water installations	DIN EN 806, part 3
Planning, execution, operation and maintenance of drinking water installations	DIN EN 806, part 4
Planning, execution, operation and maintenance of drinking water installations	DIN EN 806, part 5
Planning, execution, operation and maintenance of drinking water installations	DIN EN 1717
Planning, execution, operation and maintenance of drinking water installations	DIN 1988
Planning, execution, operation and maintenance of drinking water installations	VDI/DVGW 6023
Planning, execution, operation and maintenance of drinking water installations	Trinkwasserverordnung (TrinkwV)

Regulations from section: Media

Scope / Notice	Regulations applicable in Germany
Suitability for drinking water	Trinkwasserverordnung (TrinkwV) Trinkwasserverordnung (TrinkwV)

Regulations from section: Product description

Scope / Notice	Regulations applicable in Germany
Suitability for drinking water installations	Trinkwasserverordnung (TrinkwV)
Suitability for drinking water installations	DIN 50930-6
Requirements in plastic components in drinking water installations	DVGW-Arbeitsblatt W270

Regulations from section: Threaded connection

Scope / Notice	Regulations applicable in Germany
Threaded pair	DIN EN 10226-1
Permitted sealants	DIN 30660
Permitted sealants	DIN EN 751-2

Regulations from section: Corrosion

Scope / Notice	Regulations applicable in Germany
External corrosion protection	DIN EN 806-2
External corrosion protection	DIN 1988-200
External corrosion protection	DKI-Informationsdruck i. 160

Regulations from section: Leakage test

Scope / Notice	Regulations applicable in Germany
Leakage test for drinking water installations	DIN EN 806, part 4
Leakage test for drinking water installations	ZVSHK-Merkblatt „Dichtheitsprüfungen von Trinkwasserinstallationen mit Druckluft, Inertgas oder Wasser“

Regulations from section: Maintenance

Scope / Notice	Regulations applicable in Germany
Operation and maintenance of drinking water installations	DIN EN 806-5

2.2 Intended use



Coordinate the use of the model for areas of use and media other than those described with the Viega Service Center.

2.2.1 Areas of use

Use is possible in the following areas among others:

- Drinking water installations

The model serves as a shut-off for the storey units.

It provides the possibility to attach a Koax G 2 measuring capsule.

The general rules of engineering and the applicable regulations must be observed for planning, execution, operation and maintenance of drinking water installations, see ↪ *„Regulations from section: Fields of application“ on page 6.*

2.2.2 Media

The model is also suitable for the following media, amongst others:

- Drinking water without limitations acc. to the applicable directives, see ↪ *„Regulations from section: Media“ on page 6*
- maximum chloride concentration 250 mg/l pursuant to applicable regulations, see ↪ *„Regulations from section: Media“ on page 6*

2.3 Product description

According to the applicable regulations, Easytop system fittings can be used for all types of drinking water and are DVGW certified, see ↪ *„Regulations from section: Product description“ on page 7.* Their plastic components comply with the KTW recommendation and the requirements pursuant to the applicable regulations.


2.3.1 Overview


The model is equipped as follows:

- top
- site protection
- dual-sided Rp-thread
- valve seat and valve plate unit made of stainless steel
- concealed straight seat valve
- recess for Coax G 2 measuring capsules
- blind flange
- insulating box (sound and heat insulation)

The model is available in the following dimension: Rp $\frac{3}{4}$.

2.3.2 Threaded connection

Prerequisite for a threaded connection, which seals via a thread, is a threaded pair in accordance with applicable regulations, see  „Regulations from section: Threaded connection“ on page 7. Pursuant to these regulations, a permitted threaded pair comprises a conical external thread and a cylindrical internal thread, e.g. R $\frac{3}{4}$ and Rp $\frac{3}{4}$.

Only use commercially available and chloride-free, DVGW approved sealant in accordance with the applicable regulations to seal threads, see  „Regulations from section: Threaded connection“ on page 7.

2.3.3 Markings on components

The model is marked as follows:

- flow direction indicator
- dimension
- DVGW writing
- position indicator

2.3.4 Compatible components

Water meter / Measuring capsule

Observe the manufacturer's instructions for mounting and use.

Should you have any questions on this subject, please contact the Viega Service Center.

2.3.5 Technical data

Observe the following operating conditions for the installation of the model:

Operating temperature [T_{\max}]	90 °C
Operating pressure [P_{\max}]	1.0 MPa (10 bar)


2.4 Information for use

2.4.1 Corrosion

Overground pipelines and fittings in rooms do not normally require external corrosion protection.

There are exceptions in the following cases:

- Contact with aggressive building materials such as nitrite or materials containing ammonium
- in aggressive surroundings

If external corrosion protection is required, observe the pertinent guidelines, see  „Regulations from section: Corrosion“ on page 7.



Easytop fittings made of gunmetal are suitable for all types of drinking water.

The chloride concentration in the medium must not exceed a maximum value of 250 mg/l.

This chloride is not a disinfectant, but in fact pertains to the content in sea and table salt (sodium chloride).

2.5 Optional accessories

The following optional accessories are available:

- Equipment sets
- Public building model
- mounting set



Fig. 1: Model 2236.10, equipment set



Fig. 2: Model 2236, equipment set



Fig. 3: Model 2236.50, public building model

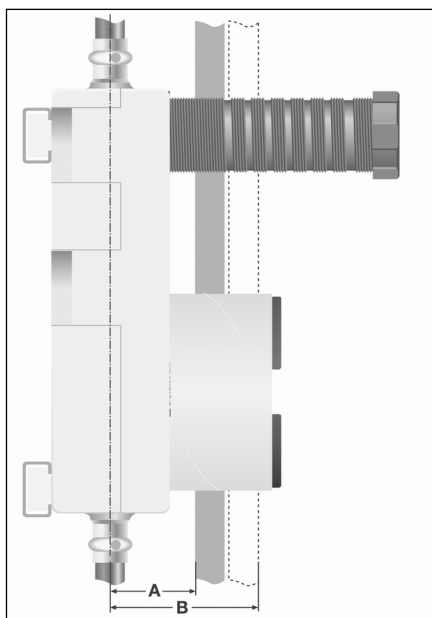


Fig. 4: Model 2235.90, mounting set front position

3 Handling

3.1 Assembly information

3.1.1 Installation dimensions



A - at least 45 mm
B - maximum 77 mm

3.1.2 Mounting instructions

Checking system components



Do not remove the model from the packaging until immediately before use.

System components may, in some cases, become damaged through transportation and storage.

- Check all parts.
- Replace damaged components.
- Do not repair damaged components.
- Contaminated components may not be installed.

During assembly

A blind flange ensures unhindered operation until assembly is completed.

Observe the following when mounting:

- flow direction indicator
- minimum / maximum installation depth
- use suitable tools



Choose the place of installation so that the fitting is easily accessible and simple to operate.

3.2 Assembly

3.2.1 Mounting the valve



Carry out a functionality test after initial mounting.

Installation is possible in masonry (wet construction) and in dry constructions (pre-wall / duct installations).

Attaching in dry constructions



Fig. 5: 2235.90 Fixing set front

Actuating the valve

- Attach the protective sleeve of the valve in front of and behind the cladding (e. g. sheetrock or Fermacell panels) with lock nuts.
- Seal the wall lead-in on the front side of the wall with the self-adhesive sealing flange.

- Open or close the valve clockwise or anti-clockwise respectively.
- During the preliminary building work phases:
Actuate the valve via the protective cap.

3.2.2 Leakage test

The installer must perform a leakage test before commissioning.

Carry out this test on a system that is finished but not yet covered.

Comply with the general rules of engineering and the applicable directives, see ↗ „*Regulations from section: Leakage test*“ on page 7.

Document the result.

3.3 Maintenance



NOTICE!

Inform your customer or the operator of the drinking water installation that the system has to be maintained on a regular basis.

Observe the applicable regulations for the operation and maintenance of drinking water installations, see ↗ „*Regulations from section: Maintenance*“ on page 8.



Viega recommends actuating the fitting regularly and checking its function.

3.4 Disposal

Separate the product and packaging materials (e. g. paper, metal, plastic or non-ferrous metals) and dispose of in accordance with valid national legal requirements.